

# Tool & Product Update

## Model 942 POWERIG<sup>®</sup> Hydraulic Unit Reservoir Sealing Strap Kit

The new strap kit prevents hydraulic fluid leakage between base plate and reservoir. The four straps provide an even pressure on entire gasket, thereby creating a continuous seal.

Reservoir Sealing Strap Kit, P/N 114940, can be installed on all Model 942 hydraulic units now in use.

### To install strap kit:

1. Remove socket head cap screws joining base plate to reservoir. Use 1/8" hex key.
2. See Figure 1. Place strap, while aligning holes, against flange of reservoir.

### Note

Covers must be assembled with joint correctly interlocked. See Figure 2.

3. Assemble socket head cap screws, lock washers and nuts in original position, nut against strap. Use 1/8" hex key and tighten evenly.
4. Drilling additional holes in straps will be required to match some older bolt patterns.

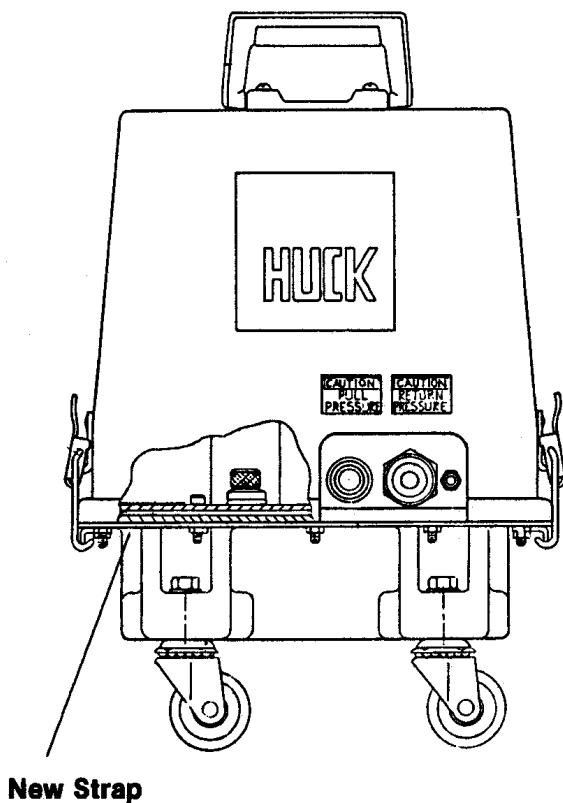


Figure 1

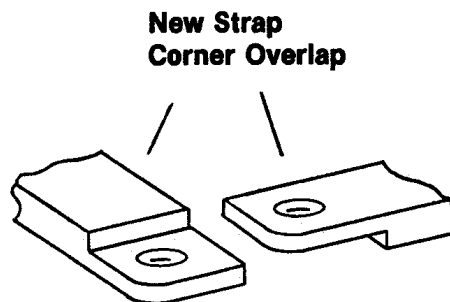


Figure 2